
SEAT KIT INSTALLATION INSTRUCTIONS YAMAHA DRIVE/G29

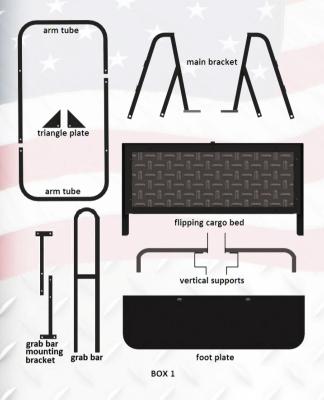





BAG#	Function	Hardware	Specification	Qty
	arm tubes	hex bolt	1/4-1 1/2	4
5.4		hex bolt	1/4-2 1/2	2
D-1		flat washer	1/4	12
		lock nut	1/4	6
	D-2 flipping cargo bed	hex bolt	1/4-3/4	2
D 2		hex bolt	1/4-1 3/4	2
D-2		flat washer	1/4	8
		lock nut	1/4	4
	back cushion	hex bolt	1/4-1	2
D-3		flat washer	1/4	8
D-3	seat cushion	flat washer self-drill screw hex bolt flat washer	M4.2*30	6
D-4		hex bolt	3/8-1 1/4	2
	vertical supports to foot plate	flat washer	3/8	4
		spring washer	3/8	2
7.2 T	1.00	nut	3/8	2
	roof struts to main	hex bolt	1/4-1 1/2	4
D-5	bracket	flat washer	1/4	4
	DidCKet	lock nut	1/4	4
	1 71	hex bolt	3/8-3 1/2	2
D-6	vertical supports to cart	flat washer	3/8	4
		spring washer	3/8	2
		drill bit Ø11	Ø11	1
1	grab bar	hex bolt	1/4-1 3/4	8
D-7		flat washer	1/4	16
		lock nut	1/4	8

INSTALLATION



Step 1: Take off canopy / front backrest cushion pad / rear roof support bars (plastic and steel both) / main brackets (with bag holder and basket) / plastic access panel cover.



Step 2: Install seat cushion on flipping cargo bed use 6 self-drill screws from hardware D-3.



Step 3: Install main bracket on cart using original factory hardware. Tight the bolts from inside the cart.



Step 4: Install two rear roof supports on main brackets using hardware D-5

SEAT KIT INSTALLATION INSTRUCTIONS YAMAHA DRIVE/G29





Step 4: Install plastic water drain rear roof support bars on steel rear roof support bars using original factory fasteners.



Step 5: Install vertical supports on cart's bagwell area using hardware D-6. You have to enlarge the mounting hole using supplied drill bit. Reattach the access panel cover back to cart using original factory fasteners.



Step 6: Install flipping cargo bed on vertical support and on main bracket using hardware D-2.



Step 7: Install foot plate on vertical supports using hardware D-4.



Step 8: Install arm tubes, the bolt points outwards. Use hardware D-1. Use longer bolts on foot plate. Install triangle brackets between arm tube and under footplate.





Step 9: Install front back cushion using factory hardware. Install rear seat back cushion on the main bracket using hardware D-3.

GRAB BAR INSTALLATION INSTRUCTIONS FITS ALL STEELENG REAR FLIP SEAT KIT







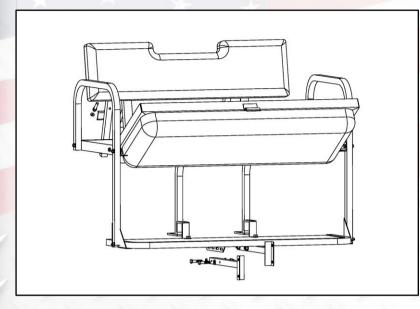

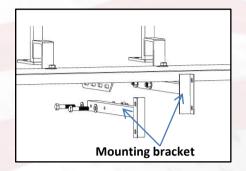

1. Install mounting bracket to footplate using 4 supplied 1/4-1 3/4 bolts, washers and nuts.

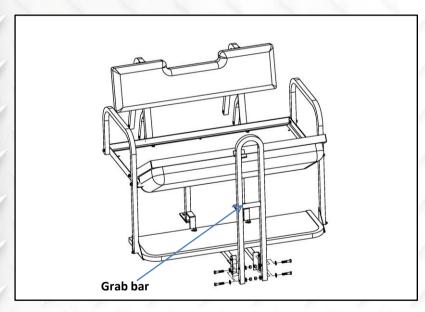

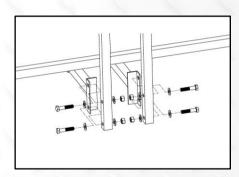

2. Install grab bar to mounting bracket using 4 supplied 1/4-1 3/4 bolts, washers and nuts.

Please refer to below chart to identify your hardware bag# to install grab bar.

Cart Style	Hardware Bag#	Cart Style	Hardware Bag#
EZGO TXT	B-7	EZGO RXV	R-5
Club Car DS	C-8	Club Car Precedent	A-6
Yamaha G14-G22	E-7	Yamaha Drive	D-7

All specifications mentioned above are subject to change without prior notice.



RETURN MERCHANDISE AUTHORIZATION

Dear Valued Customer,

Thank you for choosing Steeleng Golf Cart Accessories for your golf cart needs.

We apologize for the issues you are having with your purchase. We strive to offer the absolute best quality at the absolute best price.

To best serve you, we do need a little information to help process your return and/or exchange faster.

Please complete the following	ng and include ti	nis entire form with your r	eturn.	
Name				
Shipped To Address		STATE Direct Phone Order	ZIP	
Purchased with:	еВау			
This is for EXCHANGE	REFUND			
Please describe reason for re	eturn:-			
Our Return Address:				
Steeleng Golf Cart Accessori	es			
3309 Laurens Road,				
Greenville, SC 29607				
Tele: 864-675-1103				
For Office Use Only:				
Received By:		Date		
Refund Amount		Exchange Issu	ied	

^{**}Steeleng Golf Cart Accessories reserves the right to charge a 15% restocking fee for all returned and/or exchanged items.