





GOLF CART REAR FLIP SEAT KIT

FITS YAMAHA G29



SEAT BOTTOM



FLIP SEAT



SEAT CUSHION



BACK CUSHION



FOOT PLATE




VERTICAL SUPPORTS



SEATBACK BRACKET




TAB

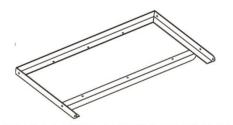

SEAT BOTTOM FRAME ARM TUBE & TRIANGLE BRACKET









GRAB BAR GRAB BAR MOUNTING BRACKET


Bag#		Spec.	Qty.
1	Hex bolt	1/4-1 1/2	4
	Flat washer	1/4	8
	Lock nut	1/4	4
	Hex bolt	3/8-3 1/2	2
2	Flat washer	3/8	4
2	Lock nut	3/8	2
	drill bit	Ø11	1
	Hex bolt	1/4-20*1	2
2	Hex bolt	1/4-20*1 3/4	2
3	Flat washer	1/4	8
	Lock nut	1/4-20	4
4	Philip screw	M6*14	2
4	Brace plates		2
	Philip screw	M6*14	4
5	Flat washer	M6 O.D.30	2
6	Philip screw	M6*14	2
	Lock nut	M6	2
	Philip screw	5/16*1-1/8	2
7	Nylon spacer	Nylon spacer	2
7	Flat washer	5/16	4
	Lock nut	5/16	2
8	Self-tapping screw	M6*25	5
9	Hex bolt	3/8-1 1/4	2
	Flat washer	3/8	4
	Lock nut	3/8	2
	Hex bolt	5/16-18*2-1/2	2
10	Flat washer	5/16	12
10	Lock nut	5/16-18	6
	Hex bolt	5/16-18*1-1/2	4
11	Hex bolt	1/4-1 3/4	8
	Flat washer	1/4	16
	Lock nut	1/4	8
12	Hex bolt	1/4-1	4
12	Flat washer	1/4	4

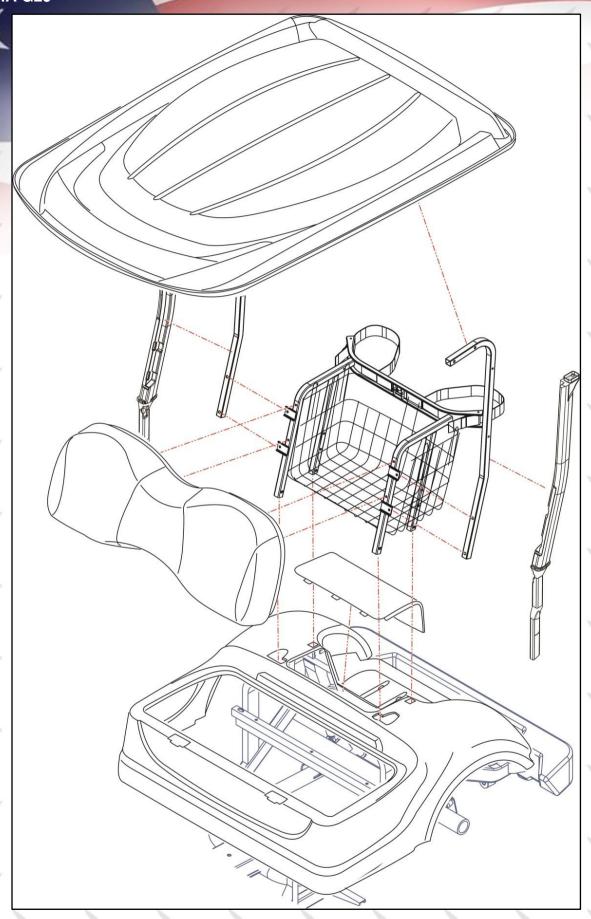


1. Take off canopy / front backrest / cushion pad / rear roof support bars (plastic and steel both) / seatback brackets (with bag holder and basket) / plastic access panel cover.

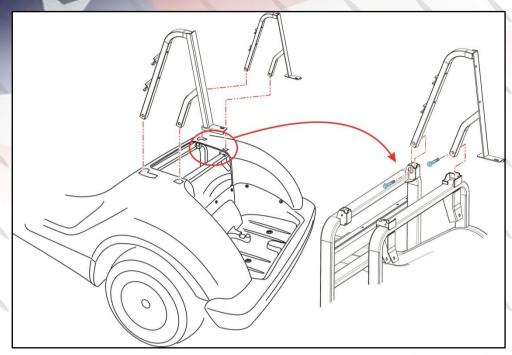


2. Attach supplied seatback bracket to cart using original factory hardware. Tighten the bolts from inside the cart. Reattach the access panel cover to cart using original factory fasteners.

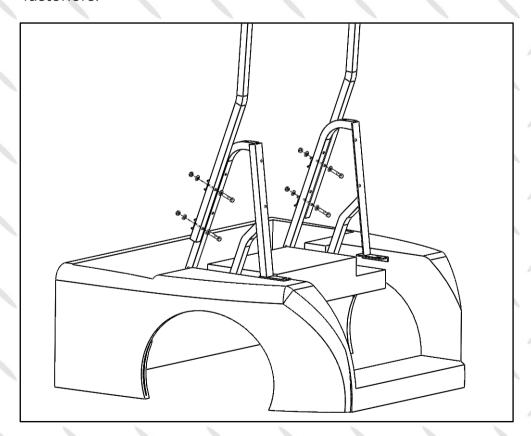


3. Attach rear roof struts to seatback bracket using hardware #1.

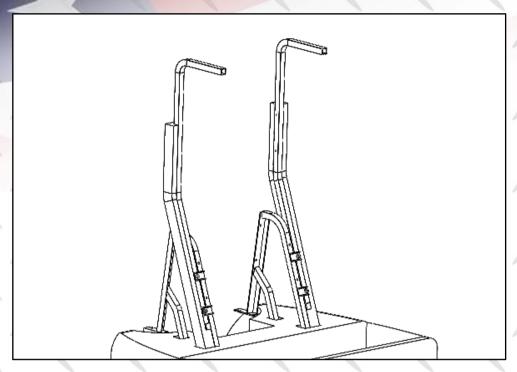


4. Re-attach canopy and plastic module to cart.

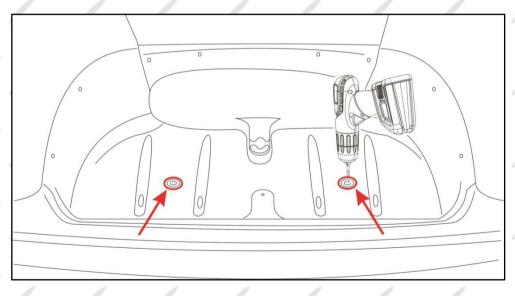


5. Drill the holes using provide drill bit on bag well area as indicated.

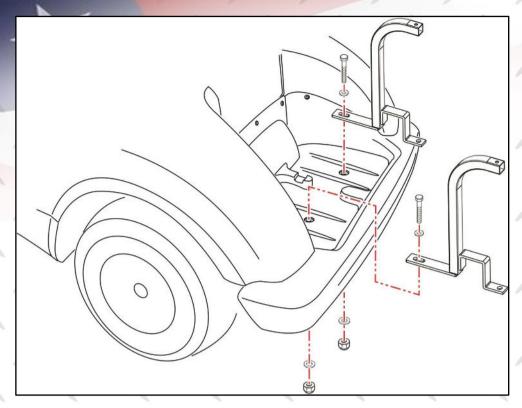


6. Drill the holes on bag well area as indicated using provided drill bit from hardware #2. Attach vertical supports to the enlarged holes using hardware #2.

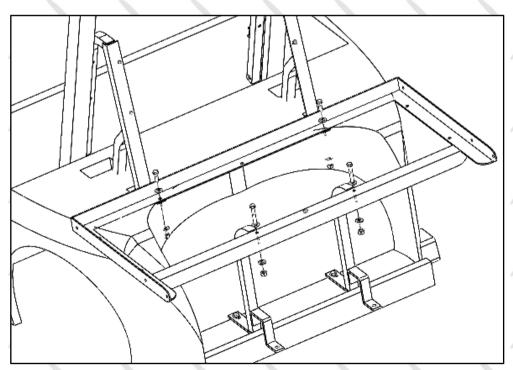


7. Attach seat bottom frame to seatback bracket and to vertical supports using hardware #3. Longer bolts are used on vertical supports side.

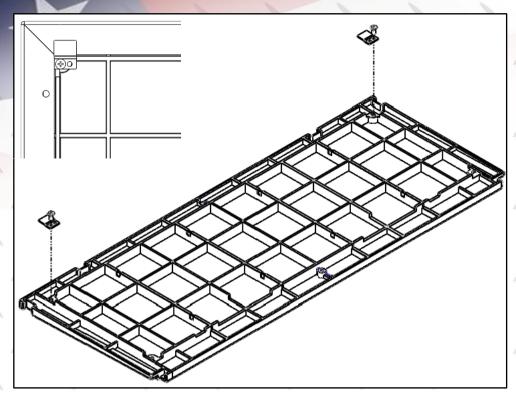


8. Attach brace plates to existing mounting holes at corners below seat bottom using hardware #4.

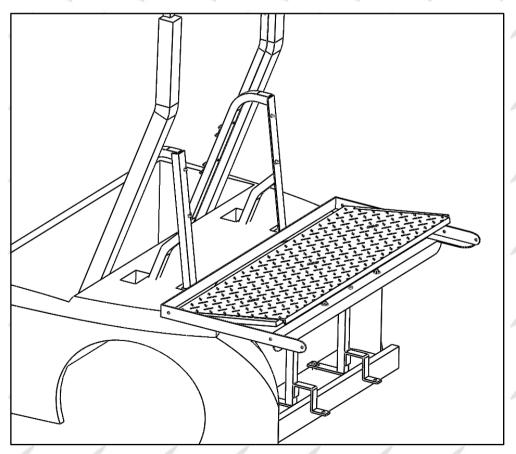


9. Flip over the seat bottom and use brace plates from last step to attach seat bottom to seat bottom steel frame.

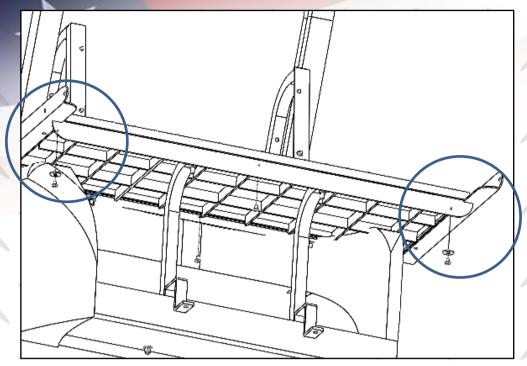


10. Once plastic seat bottom is in position, secure it to seat bottom steel frame by existing mounting holes using hardware #5. Two bolts and flat washers in the hardware bag are used at two corners as circled. The last two bolts go to the middle of front edge and rear edge.

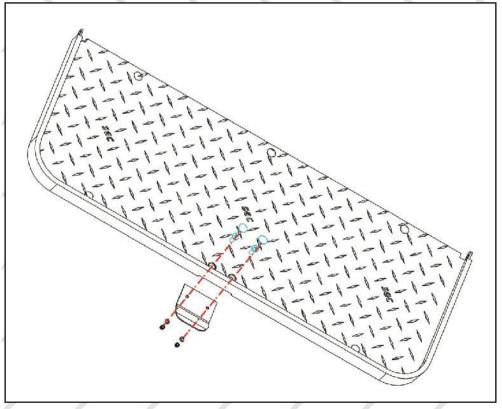


11. Attach tab to flip seat using hardware #6.

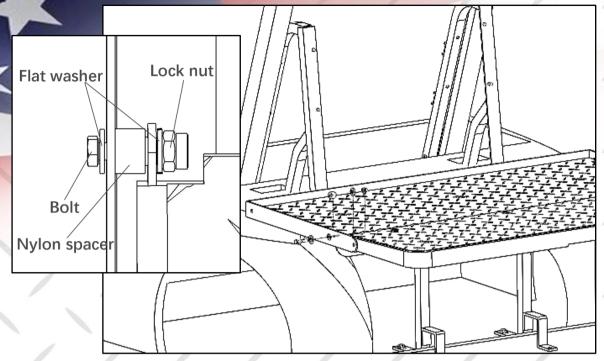


12. Attach flip seat to seat bottom/seat bottom frame assembly using hardware #7. Nylon spacers from hardware #7 is used between two parts. Detailed picture is seen from the top of the connection.

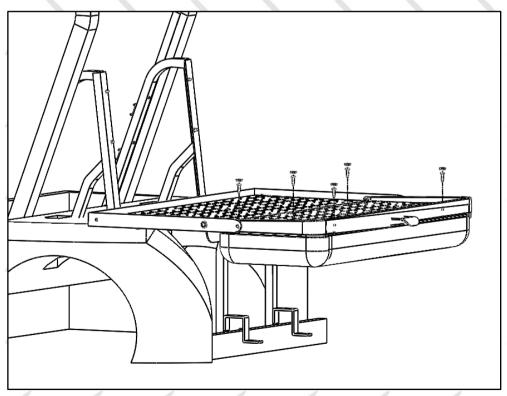


13. Flip over the flip seat part and attach seat cushion to it using hardware #8.

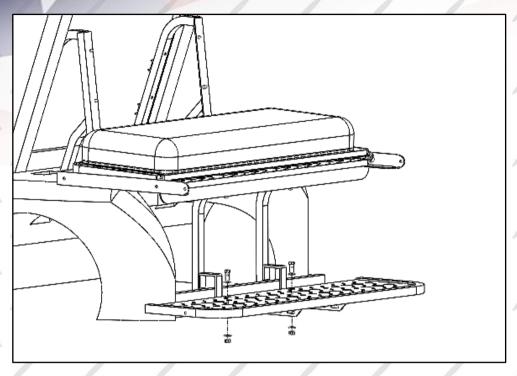


14. Attach foot plate to mounting holes on vertical supports using hardware #9.

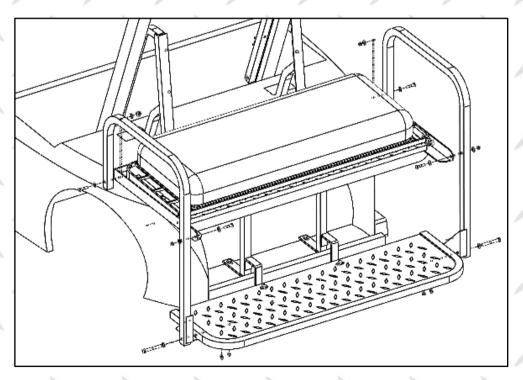


15. Attach arm tubes to seat bottom frame and foot plate. Use hardware #10. Longer bolts are used on foot plate. Install triangle brackets between arm tube and under footplate.

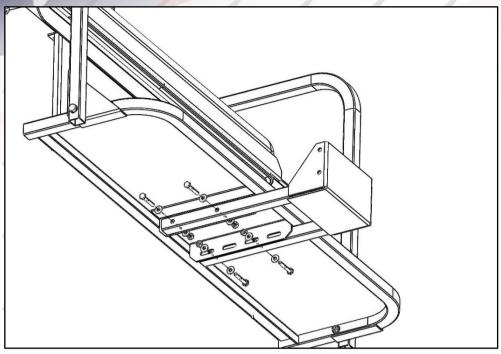


16. Attach grab bar mounting bracket to the slotted mounting holes below foot plate using hardware #11.

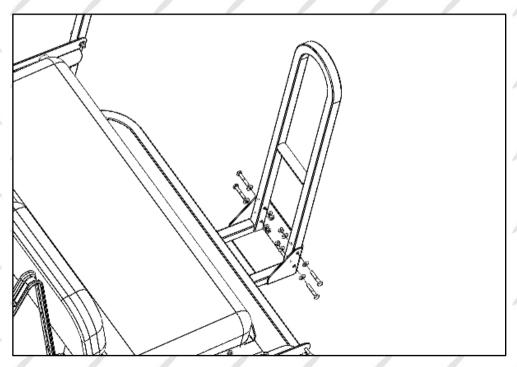

17. Attach grab bar to grab bar mounting bracket using remaining hardware #11.

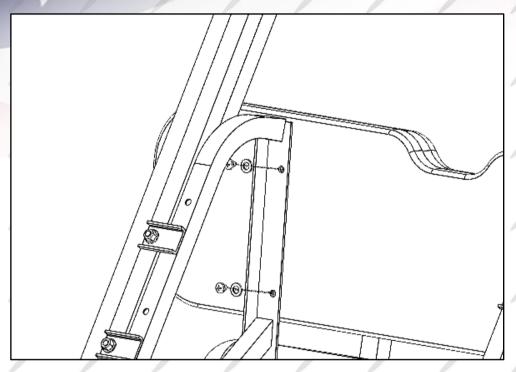

18. Attach front seat back cushion to seatback bracket using hardware #12.

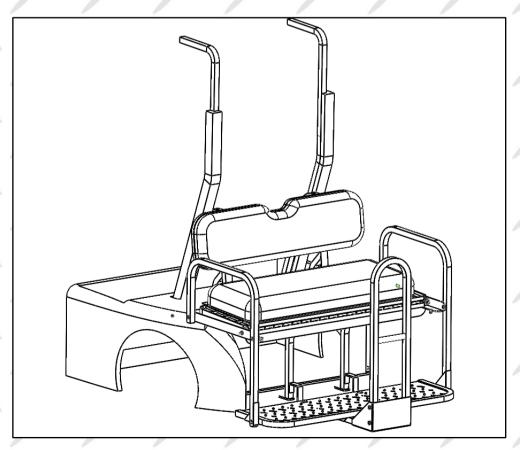

19. This is the final look of Nomad rear flip seat kit for G29 cart.



RETURN MERCHANDISE AUTHORIZATION

Dear Valued Customer,

Thank you for choosing Steeleng Golf Cart Accessories for your golf cart needs.

We apologize for the issues you are having with your purchase. We strive to offer the absolute best quality at the absolute best price.

To best serve you, we do need a little information to help process your return and/or exchange faster.

Please complete the following	g and include tl	his entire form with your r	eturn.	
Name		-		
Shipped To Address		STATE	ZIP	
Purchased with:	еВау	Direct Phone Order		
This is for EXCHANGE	REFUND			
Please describe reason for ret	:urn:-			
,				
Our Return Address:				
Steeleng Golf Cart Accessories	S			
3309 Laurens Road,				
Greenville, SC 29607				
Tele: 864-675-1103				
For Office Use Only:				
Received By:				
Refund Amount		Exchange Issu	ied	

^{**}Steeleng Golf Cart Accessories reserves the right to charge a 15% restocking fee for all returned and/or exchanged items.