





GOLF CART REAR FLIP SEAT KIT


FITS CLUB CAR PRECEDENT

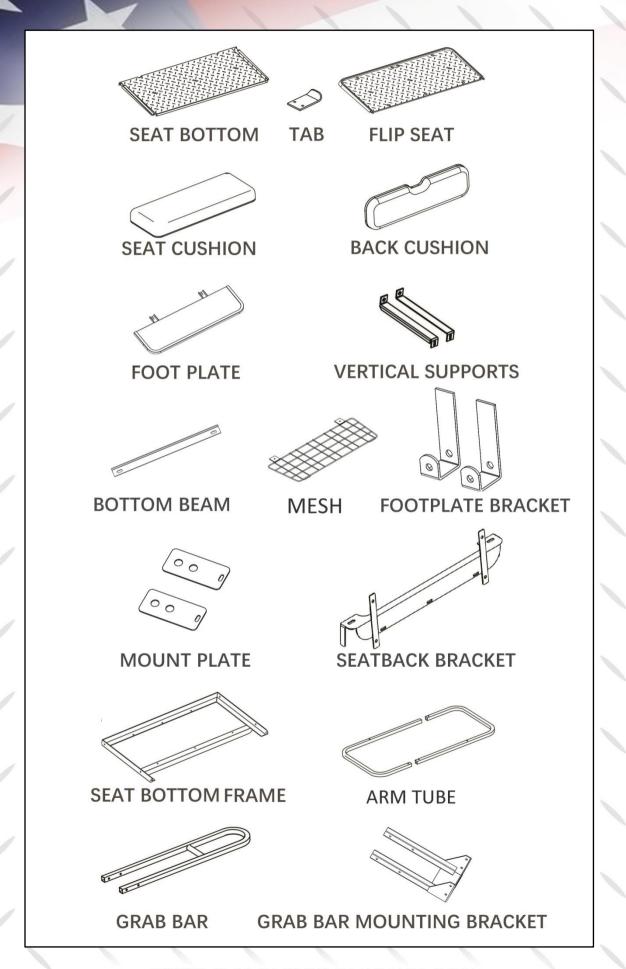

Bag#		Qty.	
1	Hex bolt	3/8-16*3	2
	Flat washer	3/8	4
	Spring washer	3/8	2
	Hex nut	3/8	2
2	Hex bolt	3/8-16*1	2
	Flat washer	3/8	4
	Spring washer	3/8	2
	Hex nut	3/8	2
3	Hex bolt	1/4-20*1	4
	Flat washer	1/4	8
	Lock nut	1/4	4
4	Philip screw	M6*14	2
	Brace plate		2
5	Philip screw	M6*14	4
	Flat washer	M6*30	2
6	Philip screw	M6*14	2
	Lock nut	M6	2
	Philip screw	5/16*1-1/8	2
7	Nylon spacer	Nylon spacer	2
7	Flat washer	5/16	4
	Lock nut	5/16	2
8	Self-tapped screw	M6*25	5
	Hex bolt	5/16-18*1 1/2	4
	Hex bolt	5/16-18*2 1/2	2
9	Flat washer	5/16	12
	Lock nut	5/16	6
10	Hex bolt	1/4-20*1	4
10	Flat washer	1/4	4
	Hex bolt	1/4-20*1 3/4	
11	Flat washer	1/4	16
	Lock nut	1/4	8

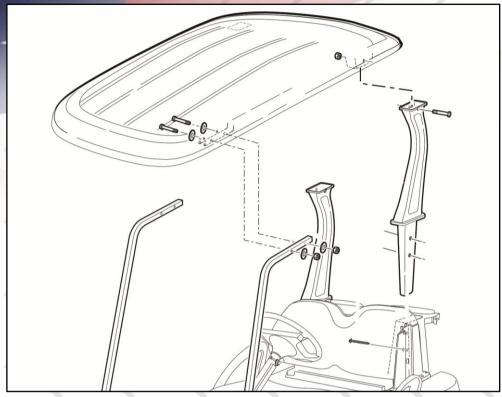


1. Remove all plastic module.

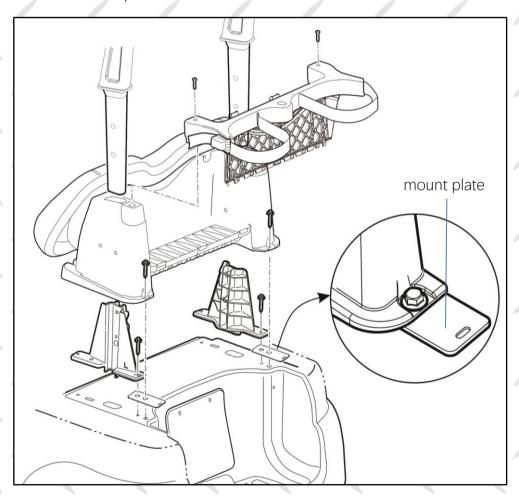


2. Line up holes on mount plates with existing holes. Then reattach the plastic module and secure all hardware.


WWW.STEELENGGOLFCART.COM

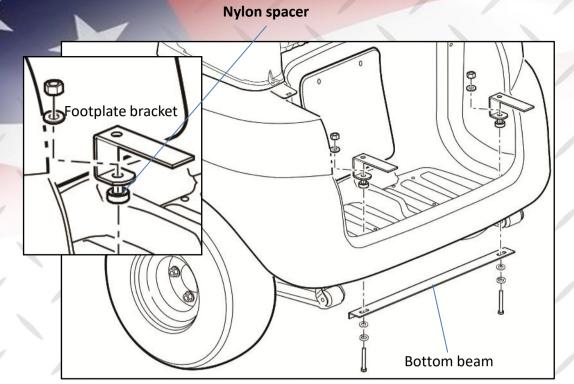


3. Attach footplate bracket and nylon spacer to cart frame. Use bolt from hardware #1 all the way up to attach these two parts to bottom beam.

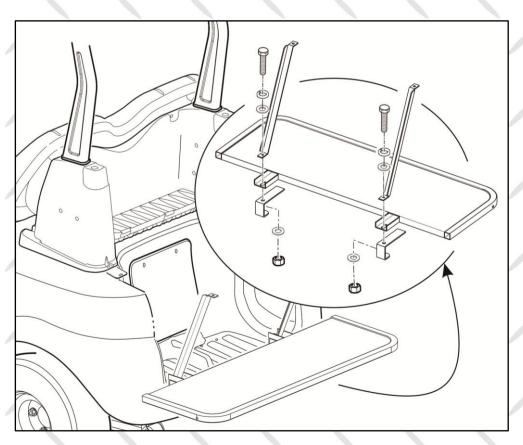


4. Attach vertical supports and foot plate to footplate brackets using hardware #2.

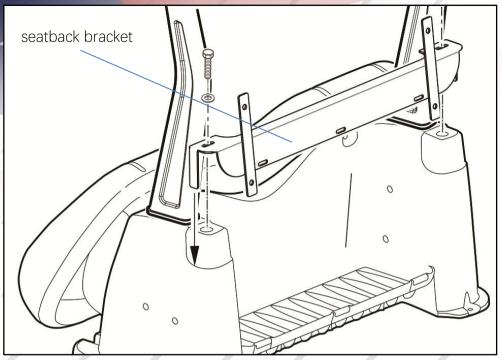


5. Attach seatback bracket to plastic module. The edge of the seat bracket is firmly inserted into the plastic module as shown and fastened with factory bolts and washers.

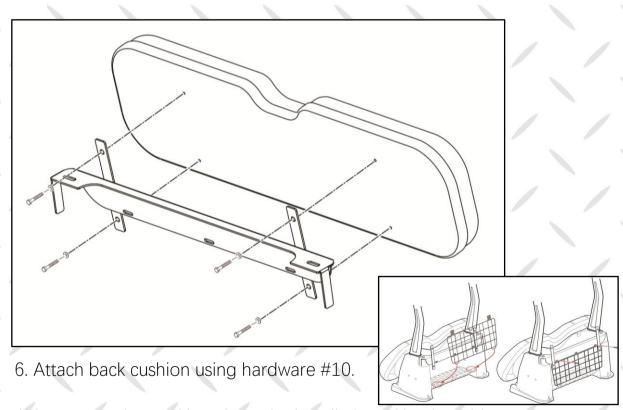


if factory mesh panel interferes the installation of back cushion, please use supplied steel one.

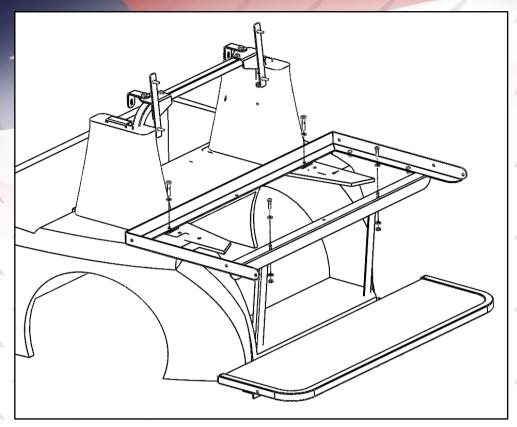


7. Attach seat bottom frame to vertical supports and to mount plate using hardware #3.

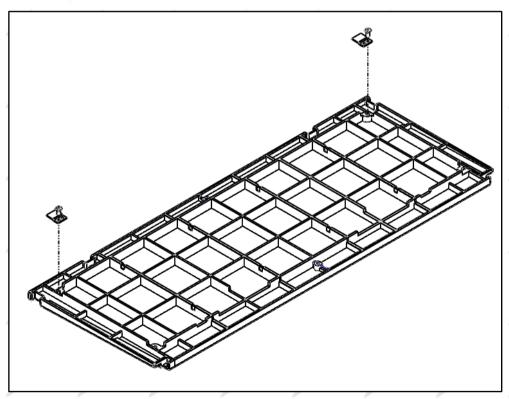


8. Attach two brace plates from hardware bag #4 to plastic seat bottom using hardware from same bag.

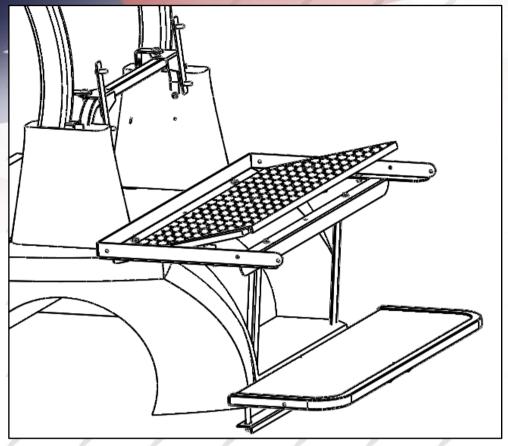


9. Use brace plates from last step to clamp the plastic seat bottom to seat bottom frame.

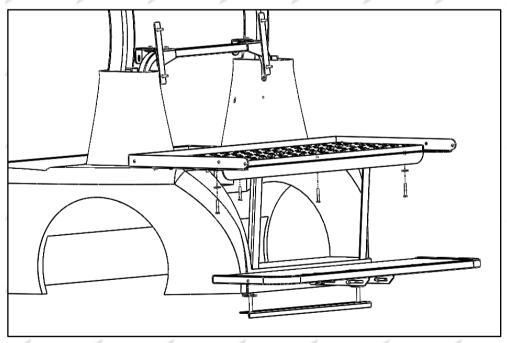

10. Attach rear edge of plastic seat bottom to seat bottom frame by existing mounting holes using hardware #5. Two flat washers in the hardware bag are used at two corners as indicated. Two bolts go to the middle of front and rear edge.

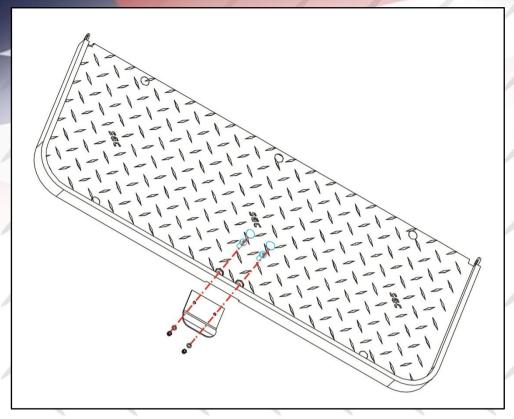


11. Attach tab to plastic flip seat using hardware #6.

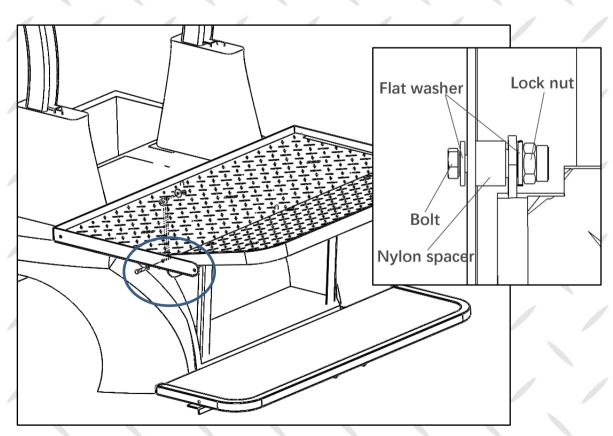


12. Attach flip seat to seat bottom frame/seat bottom assembly using hardware #7. A nylon spacer is used between two seat parts.


WWW.STEELENGGOLFCART.COM

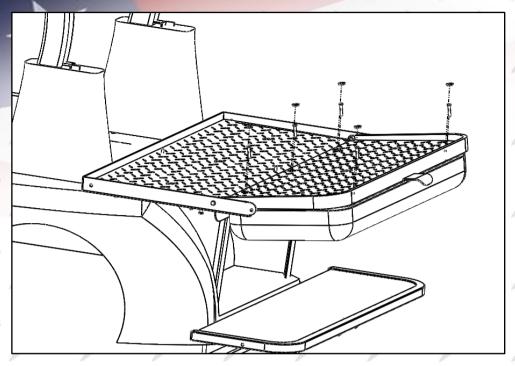


13. Flip over the flip seat and attach seat cushion using hardware #8.

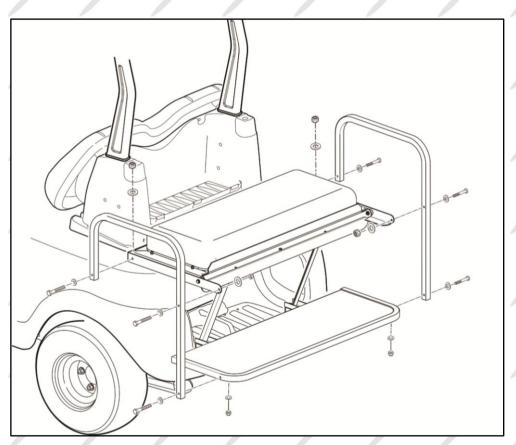

14. Attach arm tube to seat assembly and to foot plate using hardware #9. Longer bolts in the hardware bag are used to connect arm tube and foot plate.

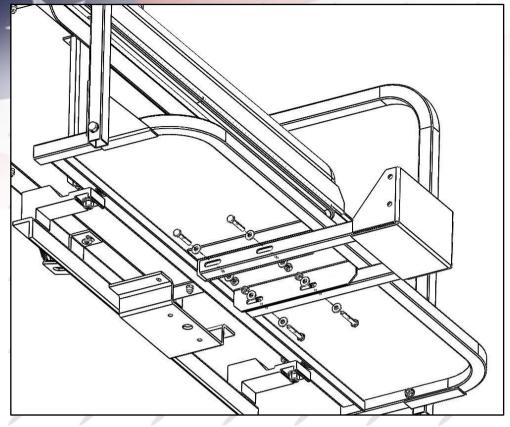

15. Attach grab bar mounting bracket to foot plate as shown in picture using hardware #11.

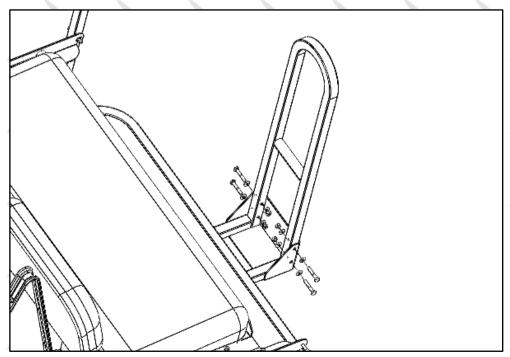

16. Attach grab bar to grab bar mounting bracket using remaining hardware #11. Flip over the flip seat so tab stays on the beam of grab bar. When the flip seat is level, then tighten the hadrware. Installation finishes.



RETURN MERCHANDISE AUTHORIZATION

Dear Valued Customer,

Thank you for choosing Steeleng Golf Cart Accessories for your golf cart needs.

We apologize for the issues you are having with your purchase. We strive to offer the absolute best quality at the absolute best price.

To best serve you, we do need a little information to help process your return and/or exchange faster.

Please complete the followi	ng and include tr	iis entire form with your i	eturn.		
Name					
Shipped To Address		STATE	ZIP		
Purchased with:	еВау	Direct Phone Order			
This is for EXCHANGE	REFUND				
Please describe reason for r	eturn:-				
Our Return Address:					
Steeleng Golf Cart Accessori	es				
3309 Laurens Road,	C 3				
Greenville, SC 29607					
Tele: 864-675-1103					
For Office Use Only:		-			
Received By:		Date		_	
Refund Amount		Exchange Issu	ıed		

^{**}Steeleng Golf Cart Accessories reserves the right to charge a 15% restocking fee for all returned and/or exchanged items.